



Panasonic KX-T4000R Cordless Phone Contact List Replacement

This guide instructs you on how to remove the contact list.

Written By: Elizabeth Kelly



INTRODUCTION

The purpose of this guide is to remove the contact list, so contacts can be added. Then reassemble for function.



TOOLS:

- [No tools required](#) (1)
-

Step 1 — Contact List




- Put finger on the plastic contact list covering.
- Slide finger to loosen the plastic.

Step 2



- Lift both plastic cover and contact list from the phone.

Step 3

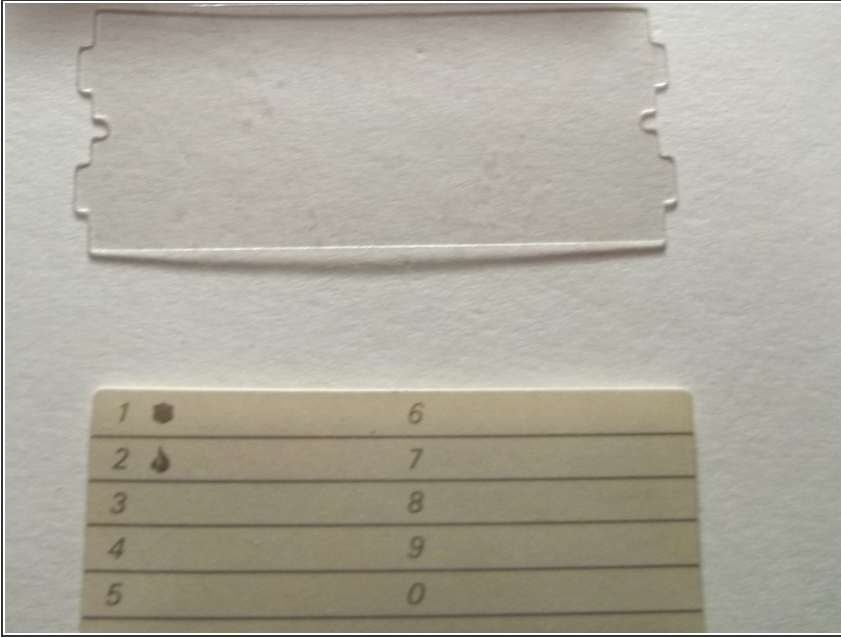

- Write new contact information on card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 05:23:44 PM.